

ZFISH zX8



QUICK MANUAL

DETAILED GUIDE ON WWW.ZFISH.EU

V - VOLUME

1 = Mute / 8 = Max

S - SENSIBILITY

1 = Min / 8 = Max

8 TONES (T)

2, 3 UNIQUE
NIGHT TONES

COLOURS (C)

6 COLOURS

ON/OFF

SWINGER CONNECTOR

MUTE (M)

PRESS „M“ YOUR
ALARM WILL
BE MUTED

ANTI - THEFT (A)

PUT YOUR ROD
INTO BITE ALARM,
PRESS AND HOLD
„A“ BUTTON TO
ACTIVATE
ALARM SYSTEM

BATTERY 9V

WHEN BATTERY
LOW, ALARM
WILL FLASH

DETAILED GUIDE ON WWW.ZFISH.EU

... YOUR BITE

FORWARD >>
LEFT LED
FLASHES

<< REVERSE
RIGHT LED
FLASHES



FORWARD

REVERSE

VIBRATION ON/OFF (V)

BITE MEMORY (R)

SHOW YOUR LAST BITE

FORWARD >>
(LED LIGHT)

REVERSE <<
(LED FLASHES)

ON/OFF/VOLUME

SYNCHRONIZATION (DO STEP BY STEP FLUENTLY)

- 1) TURN **ON** YOUR **RECEIVER**
- 2) TURN ON YOUR **ALARM**
AND CHOOSE YOUR COLOUR
- 3) PRESS AND HOLD „P“ AND „V“ ON **RECEIVER**
AT THE SAME TIME AND WAIT 3 Sec, TILL BEEP
- 4) WHILE PRESSING „P“ ON YOUR **RECEIVER** CHOOSE
LED POSITION AND SIMULATE A BITE ON **ALARM**
- 5) ALL CONFIRM BY PRESS „V“ ON **RECEIVER**

3 Fish premium collection



LAST BITE
MEMORY



ANTI-THIEF
ROD ALARM



BACKWARD
& FORWARD MODE



UNIQUE NIGHT
DEEP TONES



6
CHANGABLE
COLOURS

WWW.ZFISH.EU

QUICK MANUAL INSIDE PACKAGING